

For Technical Support visit us at ownerscorner.sunsetter.com or Call Toll Free 800-670-7071 • Fax 877-224-4944

## **Motorized EasyShade Vinyl Coated Cable Replacement Instructions**

**Tools Needed:** 5/64" Allen Wrench, 7/16" Wrench, and Pliers.

Parts Supplied: Vinyl Coated Cable Assembly

## WARNING: FAILURE TO WEAR SAFETY GLASSES OR TO FOLLOW THE

INSTRUCTIONS BELOW CAN RESULT IN PERSONAL INJURY.

1. Unplug the power cord from the electrical outlet.

- 2. Uncoil the supplied Vinyl Coated Cable Assembly.
- 3. Bend the bare end of the Vinyl Coated Cable in a U-shape with the pliers about 34" from the end.
- 4. Look at the side of the Motorized EasyShade that has a Vinyl Coated Cable in place to see how the Vinyl Coated Cable is positioned in the hole in the End Plate Casting. **NOTE:** If both Vinyl Coated Cables have come loose, review Figure 6 in your original EasyShade installation instructions for placement/location of the cable mounting.
- 5. Insert the bent Vinyl Coated Cable into the hole in the End Plate Casting from the top and pull it down. You may use the pliers to help pull the Vinyl Coated Cable down.
- 6. Make sure that the Vinyl Coated Cable Stop is positioned properly in the End Plate Casting.
- 7. Insert the Vinyl Coated Cable through the Guide Hole at the end of the EasyShade Drop Down Panel.
- 8. Place the end of the Vinyl Coated Cable through the hole in the Cable Guide Bracket and, from the bottom, slide the Cable Guide Stop onto the Vinyl Coated Cable and secure in place with the 3/4" Allen Wrench.
- 9. You should check to ensure that the Vinyl Coated Cable is tight; if it seems loose, you can adjust the tension using a 7/16" Open End Wrench. NOTE: Do Not Over Tighten the Cable.
- 10. If you have excess Vinyl Coated Cable extending from the bottom of the Cable Guide Stop, you can trim it off using wire cutters.
- 11. Plug the power cord back into the electrical outlet.
- 12. Test the operation of your EasyShade using the Remote Control.



p/n 4436-1