



RETRACTABLE AWNINGS

For Technical Support visit us at www.sunsetter.com/ownerscorner
or Call Toll Free 800-670-7071 • Fax 877-224-4944

Weatherbreaker Side Panel for Motorized PRO Awning Installation Instructions

Tools Needed: Pencil, 1/8" Drill Bit, Electric Drill, Step Ladder, Measuring Tape, Hammer, Phillips Screw Driver.

For masonry installation: 3/16" Masonry Drill Bit.

Parts Enclosed: Weatherbreaker Side Panel, four (4) Attachment Hooks, four (4) Mounting Screws, two (2) Cords, one (1) Cord-Lock (Housing Gear), two (2) 3/16" Plastic Anchors.

CAUTION: FAILURE TO WEAR SAFETY GLASSES OR TO FOLLOW THE INSTRUCTIONS BELOW CAN RESULT IN PERSONAL INJURY!

1. Mark a level horizontal line extending from the Top Bolt Hole of the Wall Bracket to 1" beyond the end of the Square Bar of the Awning. See **Figure 1**.

2. Draw a vertical line extending up from the end of the Square Bar that intersects with the horizontal line that you marked in **step 1**. See **Figure 1**.

Note: If a Hood is installed, move this vertical line to the inside of the Hood End Plate.

See **Figure 1**.

3. At the intersection,

For Wood frame installation: drill a 1/8" pilot hole approximately 1-1/2" deep.

For Masonry installation: drill a 3/16" hole approximately 1-1/2" deep. Insert a supplied Plastic Anchor into the hole and drive it flush with a hammer.

4. Attach the attachment hook by securing with the supplied screw.

5. Tie one of the supplied cords to the Panel as shown. See **Figure 2**.

6. Slide the two ends of the second Cord through the Cord-lock from the smaller (flat edge) side to the larger (curved) side. (Do not pull the entire cord through). Hold the Cord-lock in the center of the Cord and separate the two ends of the Cord. See **Figure 3**.

7. Slide the White Round Gear into the large (curved) open end of the Cord-lock housing until the gear pops into place. Be sure that the part of the gear that protrudes is aligned with the slot in the Cord-lock housing. Tie the two ends of the Cord so that they cannot slide back through the Cord-lock. Slide the Cord-lock all the way towards the knot on the Cord.

Continued on next page...

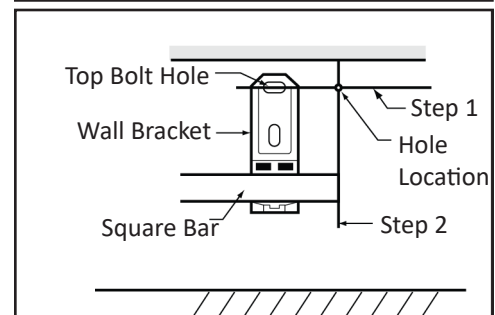
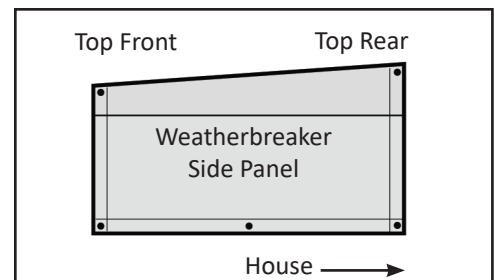


Figure 1

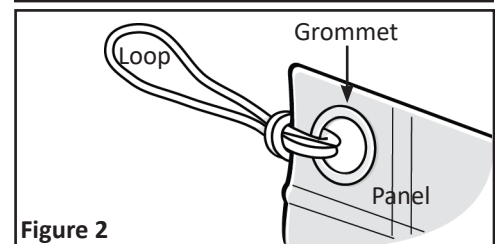


Figure 2


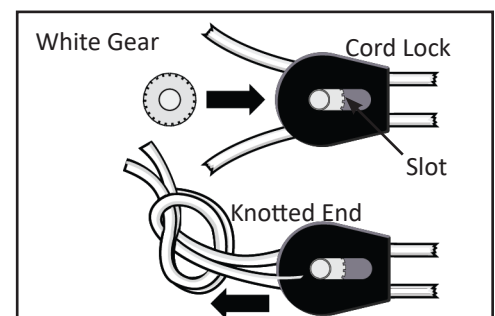


Figure 3

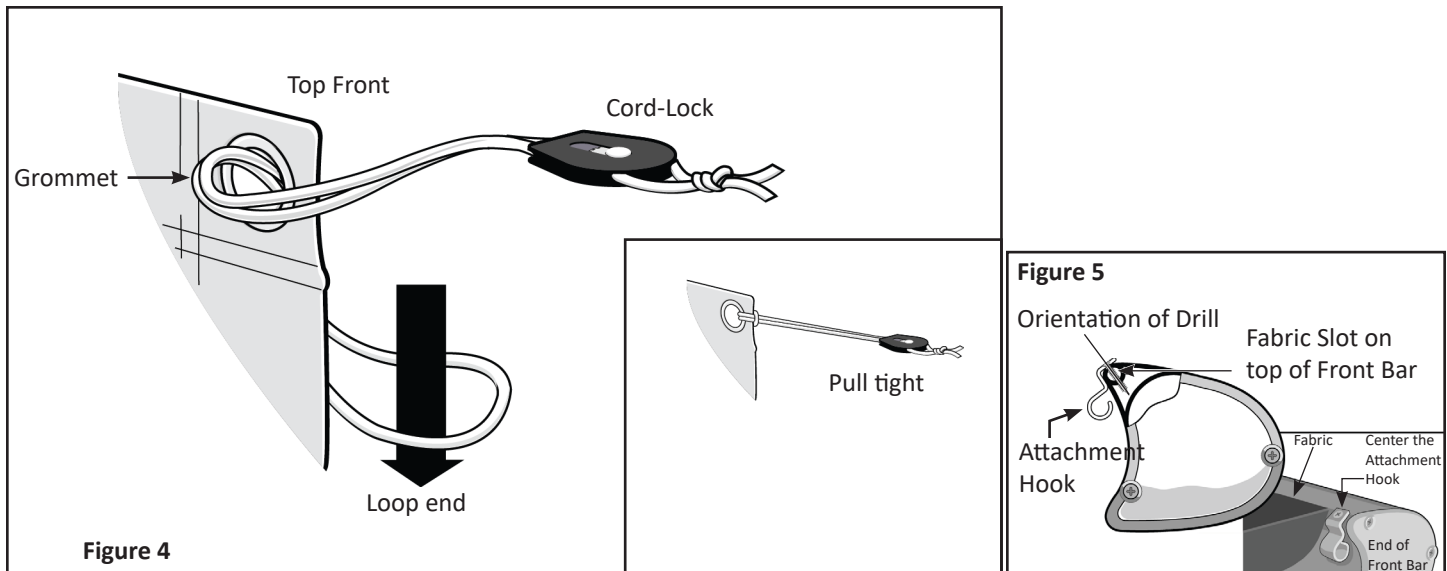

8. Slide the loop end of the Cord through the Top Front Grommet as shown, outside of arc to inside of arc. See **Figure 4**.

9. Slide the Knotted End of Cord and the Cord-lock through the loop of Cord on the other side of the Grommet as shown in **Figure 4**. Pull the rope tight.

10. Locate the Fabric Slot on the top of the Front Bar. See **Figure 5**.

11. Using the Attachment Hook as a template, set the flat surface of the Hook over the Fabric Slot, centered between the Fabric and the end of the Front Bar. See **Figure 5**.

12. With a Pencil, mark the location of the hole in the Attachment Hook on the Front Bar.

Note: Position the drill to ensure that you do not drill through the back wall of the Front Bar.

13. Drill a $\frac{1}{8}$ " hole approximately 1" deep in the Front Bar.

14. Place the Attachment Hook on the Front Bar and install using the supplied Screw. See **Figure 5**.

Setup

- Place the loop of cord (attached to the Grommet on the back of the Panel) over the Hook that you installed on the wall.
- Insert the double cords that go through the cord-lock into the opening in the Attachment Hook on the Front Bar. Tighten the panel by holding the sides of the Cord-lock and pulling the Cord. The gear of the Cord-lock should move forward to hold the Cords at this point.

Removal

- Slide the Gear of the Cord-lock back to loosen the Cord.
- Remove the Cords by sliding them out of the opening in the Attachment Hook.
- Remove the Cord loop from the Hook on the house.

Note: Remove the Weatherbreaker panels before closing the Awning.

WARNING - DO NOT LEAVE YOUR MOTORIZED AWNING EXTENDED UNATTENDED OR DURING EXCESSIVE WINDY OR RAINY CONDITIONS.