



For Technical Support visit us at [www.sunsetter.com/ownerscorner](http://www.sunsetter.com/ownerscorner)  
or Call Toll Free 800-670-7071 • Fax 877-224-4944

## SunSetter LED Light System

### Lateral Awning Installation

**\*Helper Needed\***


**Tools needed:** Electric Drill (**Use Gloves and Eye Protection**), Center Punch, Hammer, Pencil, Tape Measure, Phillips Screwdriver, and one or more Helpers.

**Parts Supplied:** LED Light Strips with Cord Assemblies (one for each Lateral Arm), Power Control Box with 18 ft. Power Cord, Mounting Clips, #8 x 1/4" Screws, #8 x 1" Screws and Anchors, Velcro Strips (not shown), Multi Channel Remote Transmitter, Spare CR2430 Battery (not shown), and a 3.2 mm Drill Bit (not shown). See **Figure 1**.

**CAUTION** - Use of a drill bit larger than the provided 3.2 mm bit can cause the Mounting Screws to strip out and cause the Mounting Clips to fail, which can lead to damage to the product and personal injury.

**WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN PERSONAL INJURY! PLEASE READ THESE INSTRUCTIONS IN ITS ENTIRETY BEFORE ATTEMPTING TO COMPLETE THIS INSTALLATION.**

**Figure 1**

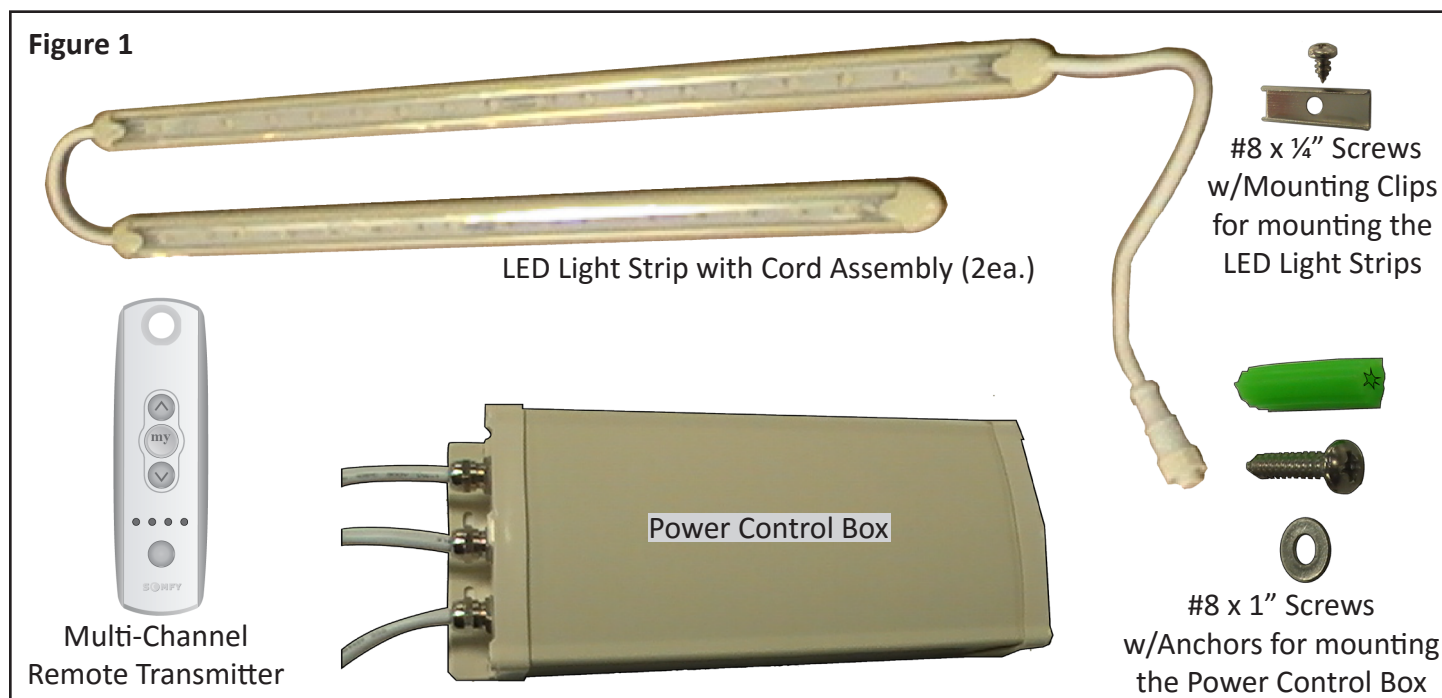

### TABLE OF CONTENTS

- Mark the Hole Locations for the LED Light Strip Mounting Clips. . . . . Page 2
- Center Punch and Drill the Holes for the LED Light Strip Mounting clips . . . . . Page 3
- Attach the Mounting Clips . . . . . Page 4
- Attach the LED Light Strips . . . . . Page 4
- Mount the LED Power Control Box. . . . . Page 5
- The Multi Channel Remote Transmitter . . . . . Page 5
- Operation of Your LED Light System . . . . . Page 7
- Master Reset . . . . . Back Cover

## Hole Locations for the LED Light Strip Mounting Clips

1. Extend the Awning to its fully open position. See **Figure 2**.
2. On Motorized Awnings, unplug the Power Cord on the Awning to prevent accidental movement of the Awning during installation of the LED Lights.
3. Using a Tape Measure and Pencil, mark the Hole Locations to be drilled into the Lateral Arms for the Mounting Clips, on the **UNDERSIDE** of each Lateral Arm section (see **Figure 2**), inside the groove. If no groove is present, mark the Center Point of the Lateral Arms, as shown in **Figure 3**.

### **Section 1 Hole Locations:**



- A. 6 inches from the Front Bar Connector, measuring toward the Elbow. See **Figure 4**.
- B. 6 inches from the Elbow, measuring toward the Front Bar Connector. See **Figure 5**.
- C. At the mid-point between points A and B.

### **Section 2 Hole Locations:**

- D. 6 inches from the Elbow, measuring toward the Lateral Arm Clamp. See **Figure 5**.
- E. 6 inches from the Lateral Arm Clamp, measuring toward the Elbow. See **Figure 6**.
- F. At the mid-point between points D and E.

**Note:** There will be a total of 6 hole locations on each Lateral Arm, or a total of 12 locations for both Lateral Arms. See **Figure 2**.

**Note:** All holes must be drilled in a straight line so LED Light Strips will snap on to the Mounting Clips.

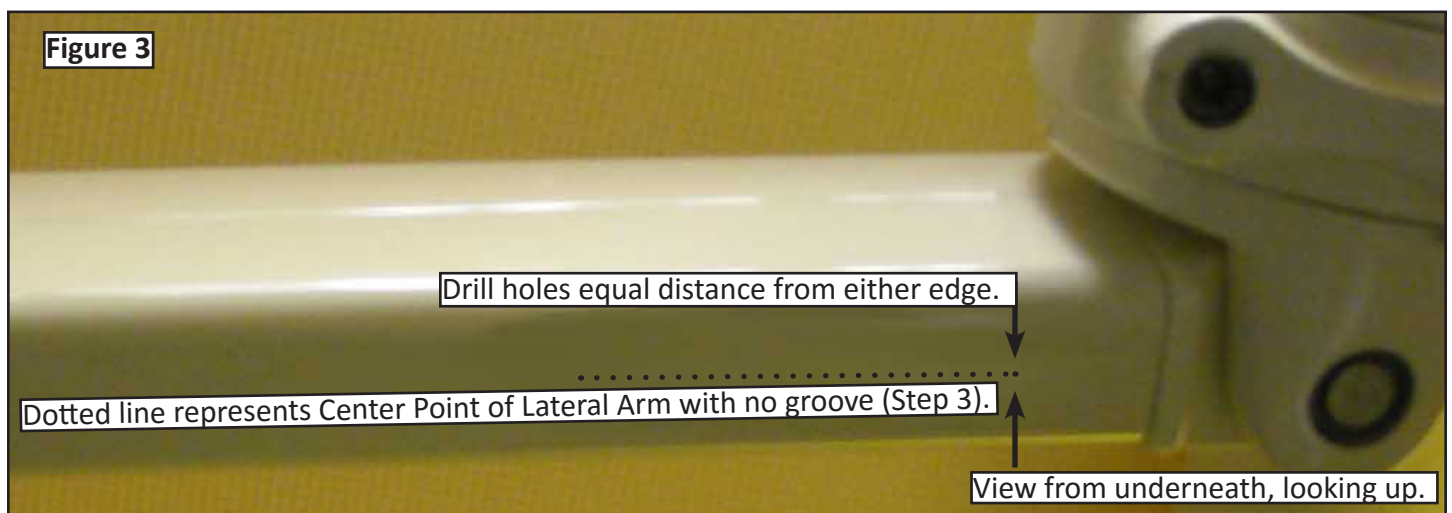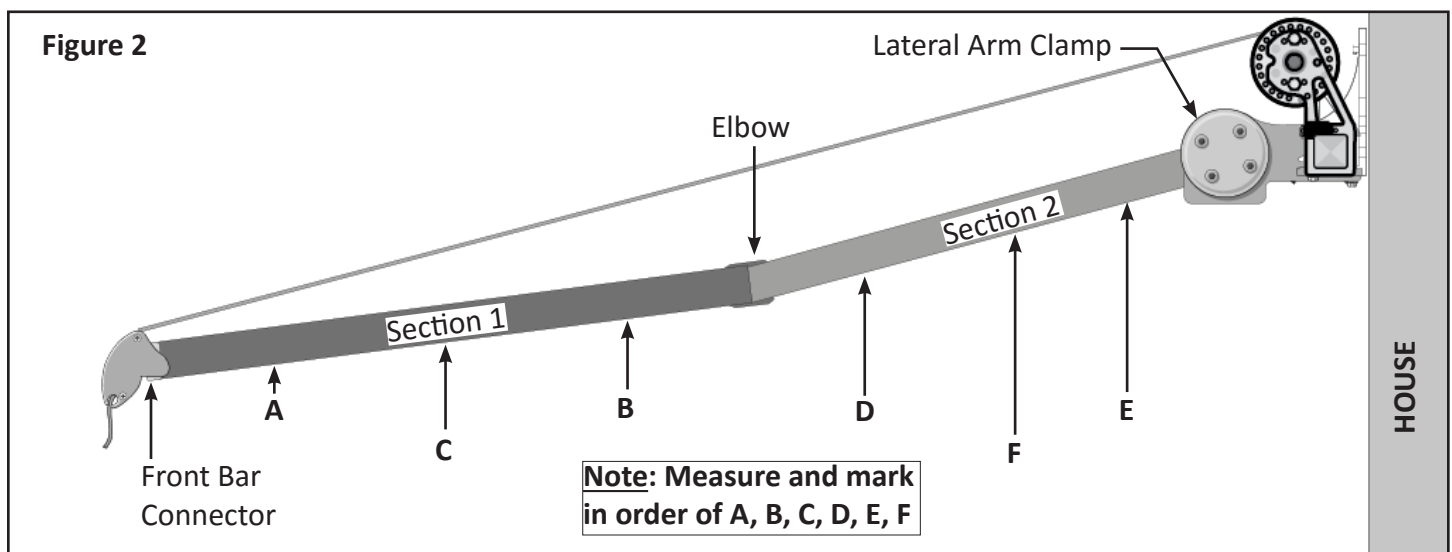




## Center Punch and Drill the Holes for the LED Light Strip Mounting Clips

4. Center-punch the marks (see locations in **Figure 2**) that you made in **Step 3**. **Note:** Have your helper hold the Lateral Arm steady while performing steps 4, 5 and 6 (punching, drilling holes and attaching clips).

### WARNINGS:

- IN THE NEXT STEP, YOU MUST DRILL INTO THE LATERAL ARMS FROM UNDERNEATH, NOT FROM THE SIDES. FAILURE TO DO SO CAN CAUSE DAMAGE TO THE LATERAL ARM.
- ALWAYS WEAR GLOVES AND USE EYE PROTECTION WHEN OPERATING A DRILL.
- WHEN DRILLING, AS SOON AS THE DRILL BIT GOES THROUGH THE LATERAL ARM WALL, STOP DRILLING. FAILURE TO STOP AS DESCRIBED CAN CAUSE DAMAGE TO THE LATERAL ARM AND THE PROVIDED DRILL BIT.

5. Using the **provided** Drill Bit, **carefully** drill a hole at each of the 12 marks. See **Figures 4, 5 and 6**. Stop drilling as soon as the Drill Bit cuts through the outer wall. **Use eye protection when operating a drill.**

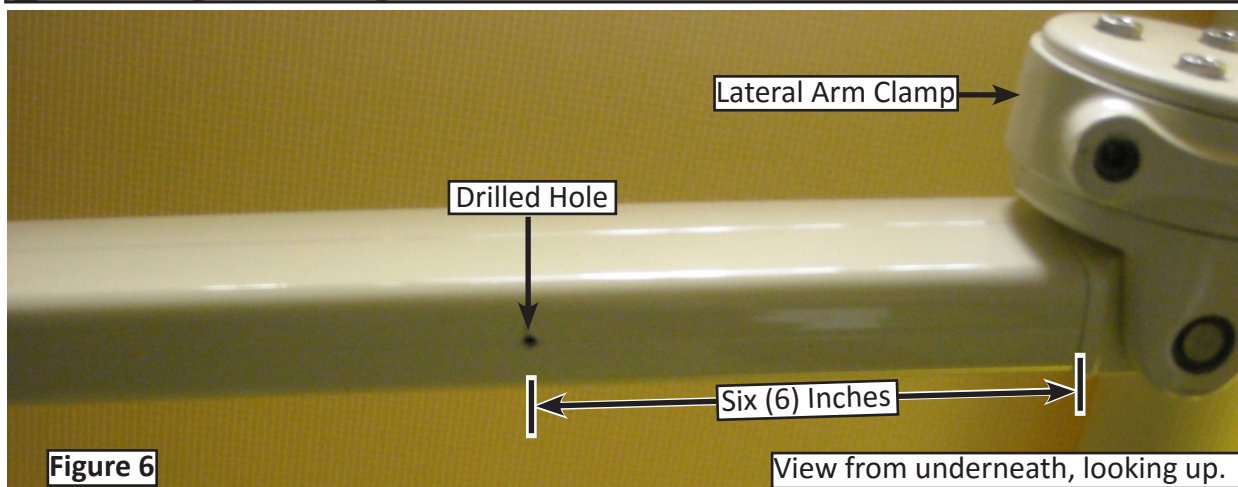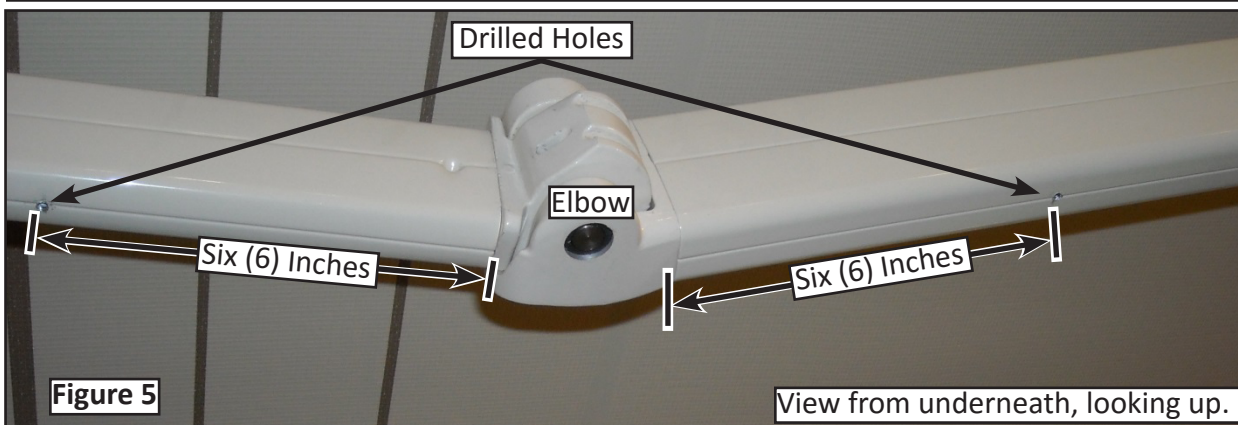
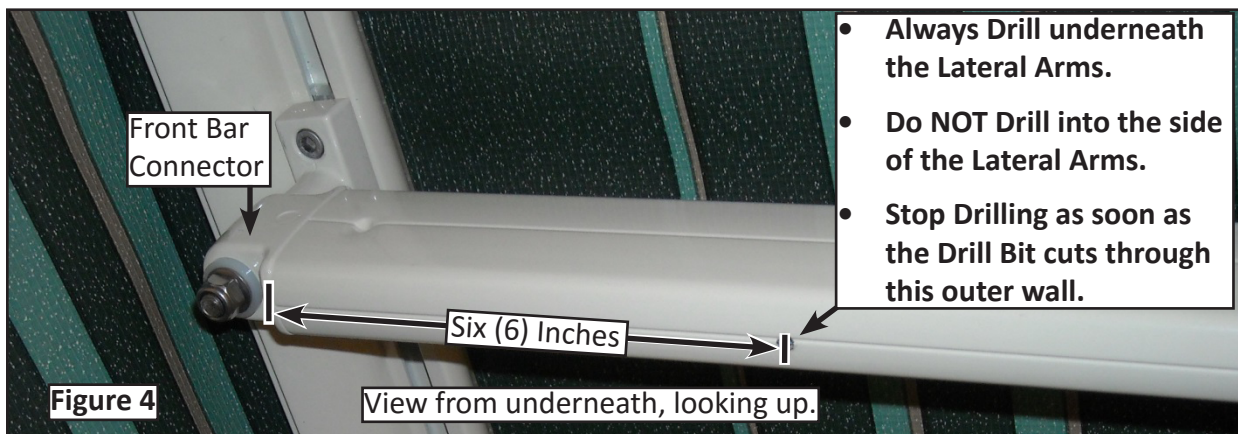




## Attach the Mounting Clips


6. Secure the Mounting Clips to the Lateral Arm using the supplied #8 x 1/4" Phillips screws. Make sure that the Mounting Clips are aligned parallel to the Lateral Arms and the open channel faces down.
7. See **Figure 7** for a **PROPERLY** aligned Clip and **Figure 8** for an **IMPROPERLY** aligned Clip.

**CAUTION**-Make sure that all of the Mounting Clips are still oriented parallel to the Lateral Arms before completing the next step. LED Lights will not attach to improperly aligned Clips. Forcing LED Lights onto improperly aligned Clips can permanently damage the Clips. See Figures 7 and 8.

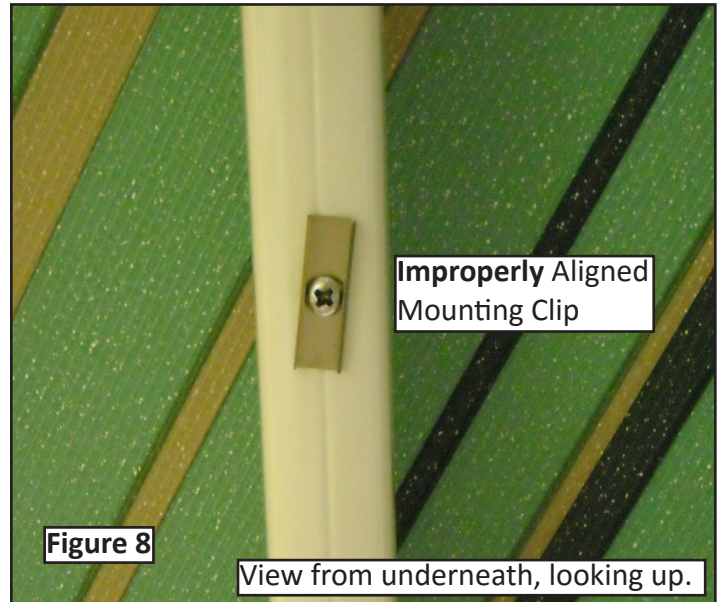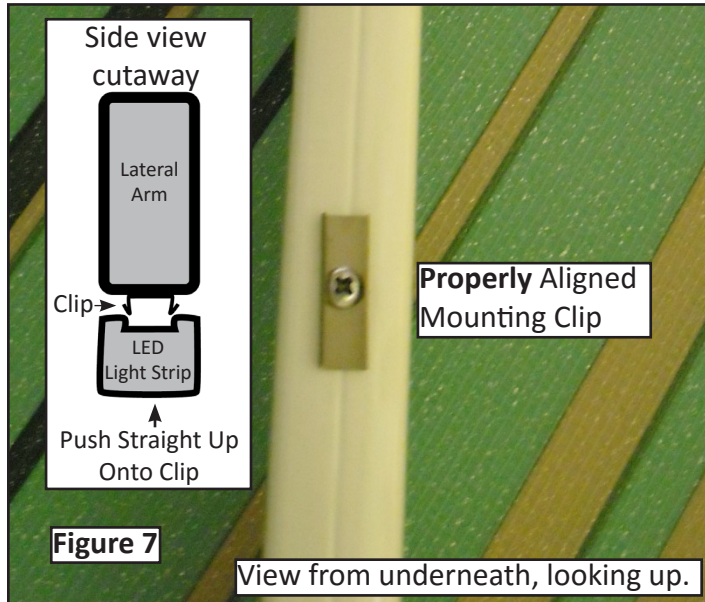

## Attach the LED Light Strips


8. Working with your helper, position the LED Light on the Lateral Arm, beginning closest to the Elbow. See **Figure 9**.
9. While your helper supports the other end of the LED Light, very carefully press the LED Light Assembly onto the installed Mounting Clip closest to the Elbow until it clicks into place, then press onto the middle Mounting Clip, then onto the Mounting Clip on the outer end. Repeat for the other mounting locations.
10. You may now remove any protective plastic film from the LED Light Strips.

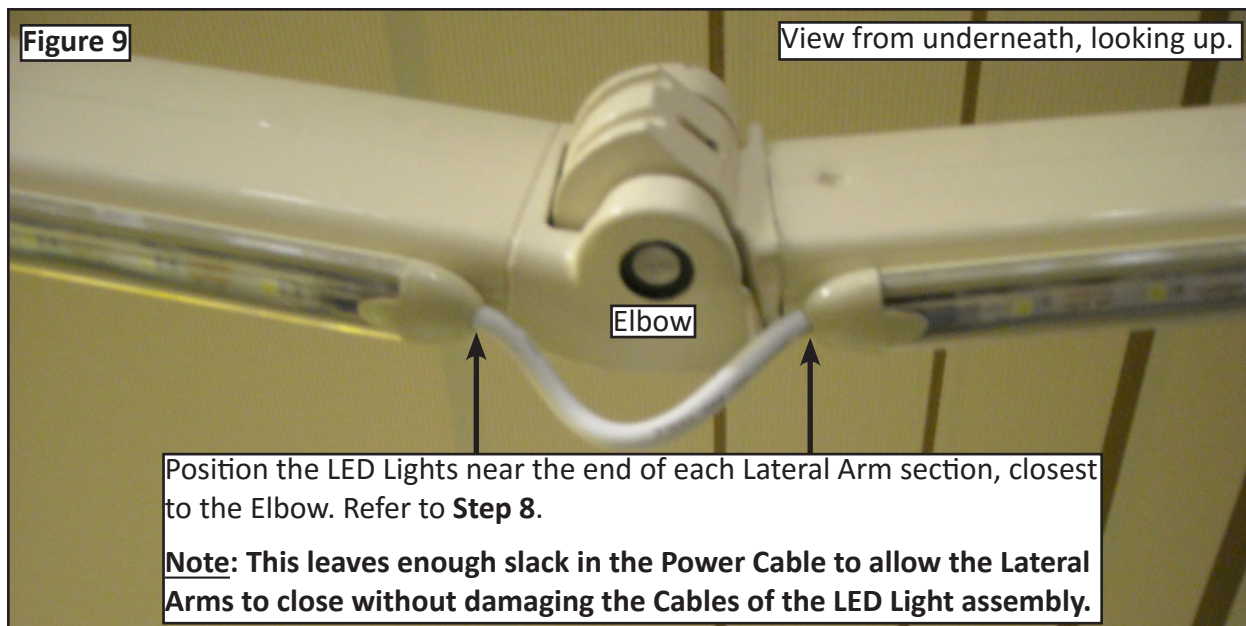




## Mount the LED Power Control Box


1. Connect the Waterproof Plugs on the LED Lights to the Cable Plugs leading from the LED Power Control Box to be sure you have enough length of Cord when positioning the Power Control Box. See **Figure 10**.
2. Locate the Power Control Box on the wall underneath the Awning.
3. Mark the four (4) hole locations on the wall, through the Mounting Tabs on each side of the Power Control Box. See **Figures 11 and 12**.
4. **You Must Remove the Power Control Box and wiring** from the wall and place it in a safe and secure location.
5. Drill the marks on the wall using the supplied Drill Bit.
6. Secure the Power Control Box to the wall using the supplied #8 x 1" screws.
7. Connect only the LED Light Strip wires to the Power Control Box and secure wires to the Square Bar using the supplied Velcro Strips. **Note: DO NOT PLUG IN THE LED LIGHT SYSTEM TO THE POWER OUTLET UNTIL INSTRUCTED TO DO SO.**
8. For Motorized Awnings only, **plug in the Motorized Awning** motor into the GFI outlet.
9. Install the Mounting Post for the Remote Transmitter in a dry location.

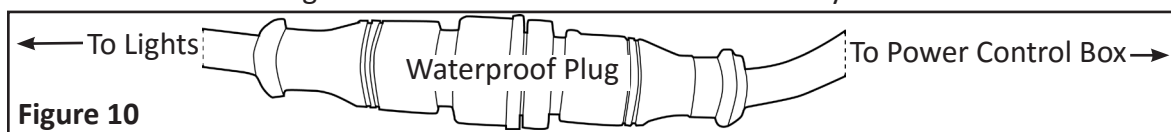

**Figure 10**

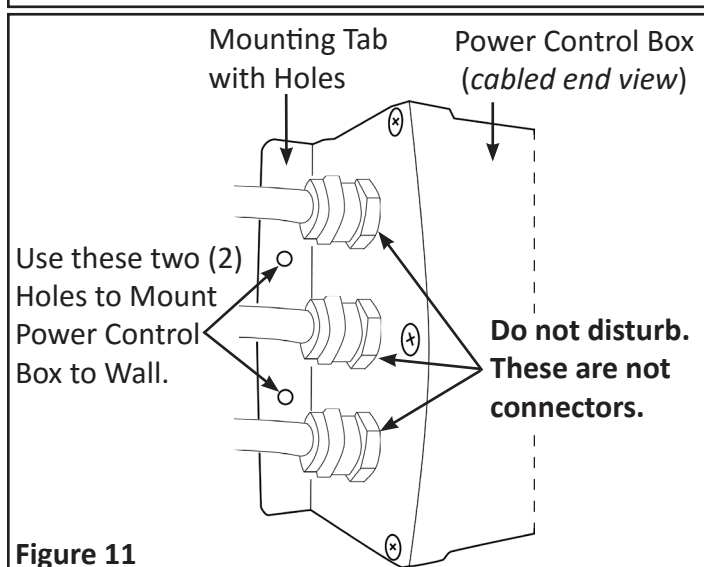

**Figure 11**

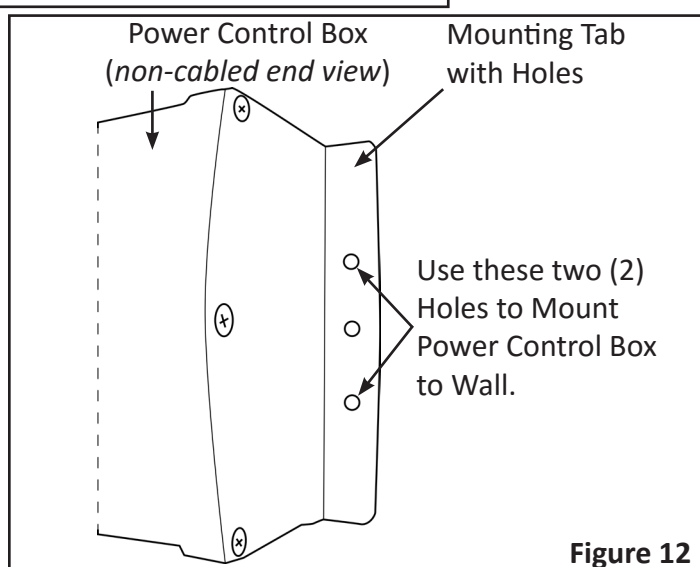


**Figure 12**

## The Multi Channel Remote Transmitter


The Multi Channel Remote Transmitter must be programmed to the Power Control Box the first time the LED Light System is plugged in. SunSetter recommends **Channel 1** be used to operate your Awning and **Channel 2** be used to operate your LED Light System, unless you did not purchase a motorized Awning, then use **Channel 1** to operate your LED Light System.

### How to Use the Multi Channel Remote Transmitter (See Figures 13 & 14)

- **To identify the active Channel**, press and release the Channel Selector button. The active Channel Indicator Light will blink for about **5 seconds**.
- **To move to the next Channel**, press and release the Channel Selector button while the Channel Indicator Light blinks. The next Channel becomes active. That Channel Indicator Light blinks for about **5 seconds**.
- All four blinking Lights indicates **Channel 5** is active.
- Channel selection moves in order **from Channel 1 through 5, then back to 1**.
- A spare **CR2430** Battery is included with the Remote Transmitter.

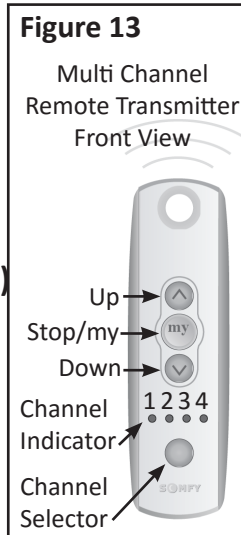

**Figure 13**

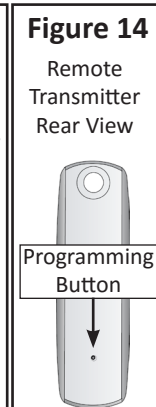

**Figure 14**

## Program the Multi Channel Remote Transmitter to the LED Light System

Use either Section A, B or C

<h3>Section A</h3> <p>For LED Lights purchased <u>WITH</u> Motorized Awning, use Steps A1 - A4.</p> <p>Channel 1 for Motor Channel 2 for Lights</p>	<p>A1. Set the Remote Transmitter to operate on <b>Channel 2</b> (see <b>Figure 13</b>).  <b>Note: Channel 1 operates your Awning, use Channel 2 for the LED Lights.</b></p> <p>A2. Plug the Power Control Box into a GFI outlet. The LED Lights will turn on for two seconds.</p> <p>A3. Press the UP and DOWN buttons on the the Remote Transmitter (see <b>Figure 13</b>) at the same time (for about three seconds). The LED Light strips (mounted on the Awning) will turn on for about two seconds.</p> <p>A4. Press the Programming Button on the back of the Remote Transmitter (see <b>Figure 14</b>) for one second. The LED lights (mounted on the awning) will turn on for two seconds.</p> <p><b>The LED Light System programming is now complete.</b></p>
<h3>Section B</h3> <p>For LED Lights purchased <u>SEPARATELY</u> from Motorized Awning, use Steps B1 - B7.</p> <p>Channel 1 for Motor Channel 2 for Lights</p>	<p>B1. Set the Remote Transmitter to <b>Channel 1</b> (see <b>Figure 13</b>).</p> <p>B2. On the <u>Remote Transmitter that controls your Awning</u>; press and hold the Programming Button (see <b>Figure 14</b>) on the back of the Remote, release after Awning jogs.</p> <p>B3. Press and hold the Programming button (see <b>Figure 14</b>) on the back of the <u>New Multi Channel Remote Transmitter</u> until the Awning jogs.</p> <p>B4. Set the Multi Channel Remote Transmitter to <b>Channel 2</b> (see <b>Figure 13</b>).</p> <p>B5. Plug the Power Control Box into a GFI outlet. The LED lights (mounted on the Awning) will turn on for two seconds.</p> <p>B6. Press the UP and DOWN buttons on the Remote Transmitter (see <b>Figure 13</b>) at the same time (for about three seconds). The LED lights (mounted on the Awning) will turn on for two seconds.</p> <p>B7. Press the Programming Button on the back of the Remote Transmitter (see <b>Figure 14</b>) for one second. The LED lights (mounted on the Awning) will turn on for two seconds.</p> <p>B8. The original Remote Transmitter continues to operate your Awning.</p> <p><b>The LED Light System programming is now complete.</b></p>
<h3>Section C</h3> <p>For LED Lights with a Vista Awning, use Steps C1 - C4.</p> <p>Channel 1 for Lights</p>	<p>C1. Set the Remote Transmitter to operate on <b>Channel 1</b> (see <b>Figure 13</b>).</p> <p>C2. Plug the Power Control Box into a GFI outlet. The LED lights will turn on for two seconds.</p> <p>C3. Press the UP and DOWN buttons on the Remote Transmitter (see <b>Figure 13</b>) at the same time (for about three seconds). The LED lights (mounted on the Awning) will turn on for two seconds.</p> <p>C4. Press the Programming Button on the back of the Remote Transmitter (see <b>Figure 14</b>) for one second. The LED lights (mounted on the Awning) will turn on for two seconds.</p> <p><b>The LED Light System programming is now complete.</b></p>

## Operation of Your LED Light System

The **LED Dimmer** can be used to dim the level of the LED Light strip to either **full ON**, **full OFF**, or in increments. The different levels can be achieved either by **pressing and releasing** a button, or **pressing and holding** a button as described below.

### Turning the LED strip full ON

To turn the LED Light strip **fully ON**, press & release within  $\frac{1}{2}$  **second** the **UP** button on the Remote Transmitter. Any time the **UP** button is pressed and released within  $\frac{1}{2}$  **second**, the LED strip will turn **fully ON**.

### Turning the LED strip full OFF

To turn the LED strip **fully OFF**, press & release (within  $\frac{1}{2}$  **second**) the **DOWN** button on the Remote Transmitter. Any time the **DOWN** button is pressed and released within  $\frac{1}{2}$  **second**, the LED strip will turn **fully OFF**.

### Dimming the LED strip ON

When the LED strip is **fully OFF**, press and hold (for more than  $\frac{1}{2}$  **second**) the **UP** button on the Remote Transmitter. As you continue to hold the **UP** button, the LED Lights will gradually dim up to **fully ON**. When a desired dimming level has been achieved, release the **UP** button.

The LED Light strip can be dimmed from any level by pressing and holding (for more than  $\frac{1}{2}$  **second**) the **UP** button on the Remote Transmitter.

### Dimming the LED strip OFF

When the LED Light strip is **fully ON**, press and hold (for more than  $\frac{1}{2}$  **second**) the **DOWN** button on the Remote Transmitter. As you continue to hold the **DOWN** button, the LED Lights will dim down to **fully OFF**. When a desired dimming level has been achieved, release the **DOWN** button.

The LED strip can be dimmed from any level by pressing and holding (for more than  $\frac{1}{2}$  **second**) the **DOWN** button on the Remote Transmitter.

### Favorite “my” Position

A favorite dimming level can be memorized as described below.

Use the Remote Transmitter to set the LED strips to a desired dimming level.

Press and hold (for approximately **5 seconds**) the “**my**” button on the Remote Transmitter until the LED Light strips blink. This level has now been memorized, and the LED Light strips will be set to this level whenever the “**my**” button is pressed and released (within  $\frac{1}{2}$  **second**).

To memorize a new favorite dimming level, follow the same procedure. The previous favorite dimming level will be overwritten.



## Reset Communication between LED Light System and a Remote Transmitter

In cases where a Remote Transmitter does not communicate with an LED Light System, those communications can be established using this procedure:

1. Unplug the LED Lights for 5 seconds.
2. Plug in the LED Lights for 15 seconds.
3. Unplug the LED Lights for 5 seconds.
4. Plug in the LED Lights. Go immediately to **Step 5**.
5. Press and Hold the PROGRAMMING button on the back of the Remote Transmitter ONLY until the LED Light Strips begin to light up, then release immediately.
6. Test the LED Lights.
7. If this Reset Communication procedure fails to restore operation to the LED Light System, go to the Master Reset procedure below.


## Master Reset

To restore the LED Light System to the FACTORY mode (in which it ships from SunSetter), use this procedure:

1. Unplug the LED Lights for 5 seconds.
2. Plug in the LED Lights for 15 seconds.
3. Unplug the LED Lights for 5 seconds.
4. Plug in the LED Lights. Go immediately to **Step 5**.
5. Press and Hold the Programming button on the back of the Remote Transmitter for 10 (ten) full seconds, watching for the LED Light Strips to light up, twice in a row.
6. Go to **Program the Multi Channel Remote to the LED Light System on Page 6**.

### WARNINGS:

- **DO NOT ATTEMPT TO OPEN THE POWER CONTROL BOX FOR ANY REASON, AS THERE ARE NO USER-SERVICEABLE PARTS INSIDE. FAILURE TO FOLLOW THIS WARNING CAN RESULT IN AN ELECTRIC SHOCK AND CAUSE PERSONAL INJURY.**
- **DO NOT ATTEMPT TO DISTURB OR REMOVE THE WATERPROOF WIRING SEALS ON THE OUTSIDE OF THE POWER CONTROL BOX, AS THESE ARE NOT WIRE CONNECTORS. SEE FIGURE 15.**

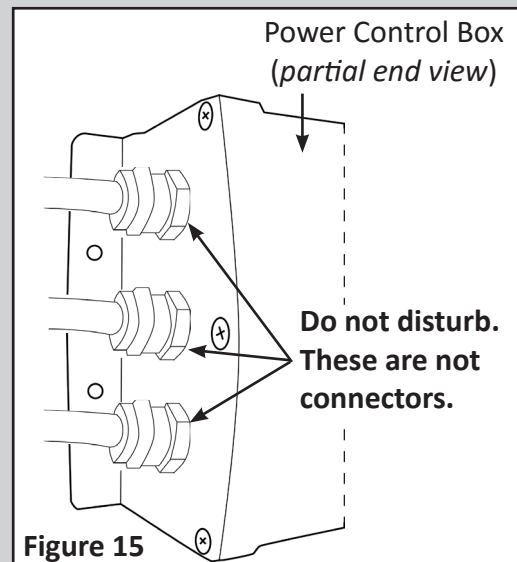

For Technical Support visit us at [www.sunsetter.com/ownerscorner](http://www.sunsetter.com/ownerscorner), email [contactus@sunsetter.com](mailto:contactus@sunsetter.com) or call Toll Free 800-670-7071 or Fax 877-224-4944

*Thank you for choosing SunSetter*