

For Technical Support visit us at http://ownerscorner.sunsetter.com or Call Toll Free 800-670-7071 • Fax 877-224-4944

Protective Cover - OASIS Freestanding Awning

Installation Instructions

'Helper Needed'

SUDDEN IMPACT HAZARD


- USE ONLY provided Breakaway Safety Clips to fasten the Protective Cover around the Awning.
- DO NOT USE other tie-downs in addition to or instead of the provided Breakaway Safety Clips.
- SECURE the Breakaway Safety Clips as directed.
- NEVER place a ladder or stand in front and at the level of the Front Bar of the Awning.


Failure to follow these instructions can present risk of **DEATH** or **SERIOUS INJURY** from being struck by an Awning suddenly opening while removing tie-downs.

MARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN PERSONAL INJURY.

Tools Needed: Step Ladder (2)

Parts Included:	12ft Oasis	16ft Oasis
Cover	1	1
Safety Clip	7	9
Cord Lock	7	9
Gear	7	9
Cord	7	9

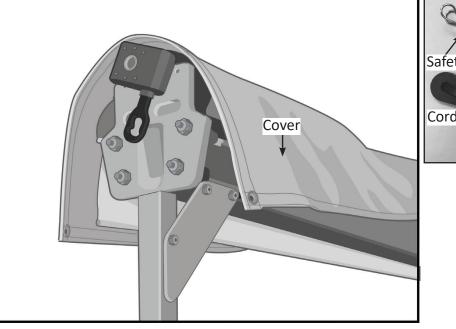

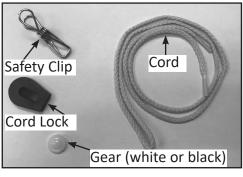

©SunSetter Products, 184 Charles Street, Malden, MA 02148



RETRACTABLE AWNINGS For Technical Support visit us at http://ownerscorner.sunsetter.com or Call Toll Free 800-670-7071 • Fax 877-224-4944

Instructions for Use of Breakaway Safety Clips and Oasis Awning Cover * REQUIRED *

SUDDEN IMPACT HAZARD

- USE ONLY provided Breakaway Safety Clips to fasten the Protective Cover around the Awning.
- DO NOT USE other tie-downs in addition to or instead of the provided Breakaway Safety Clips.
- SECURE the Breakaway Safety Clips as directed.
- NEVER place a ladder or stand in front and at the level of the Front Bar of the Awning.

Failure to follow these instructions can present risk of **DEATH** or **SERIOUS INJURY** from being struck by an Awning suddenly opening while removing tie-downs.

Figure 1 - Parts Supplied (Safety Clip Kit)

Cord through Clip Handle

Safety Clip

Cord Lock

Figure 2


Cord

Gear (White or Black)

Parts Supplied: Safety Clip, Cord Lock, Gear, and Cord (**Safety Clip Kit**) 7 Safety Clip Kits each for 12ft model, 9 Safety Clip Kits each for 16ft model. See **Figure 1**.

Assembly of Breakaway Safety Clips

- 1. Thread a Cord through one of the safety Clip handles. See Figure 2.
- Slide the two ends of the Cord through the Cord Lock from the smaller (flat edge) side to the larger (curved) side. (Do not pull the entire Cord through.) See Figure 3.
- 3. Hold the Cord Lock in the center of the Cord and separate the two ends of the Cord. See **Figure 4**.
- 4. Slide the Gear into the large (curved) side of the Cord Lock until the Gear pops into place. Be sure that the part of the Gear that protrudes is aligned with the slot in the Cord Lock. See Figure 5.
- 5. Repeat with remaining Safety Clips, Cords, Gears, and Cord Locks.

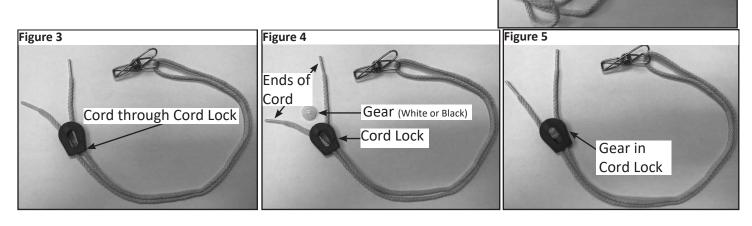

SUDDEN IMPACT HAZARD

- USE ONLY provided Breakaway Safety Clips to fasten the Protective Cover around the Awning.
- DO NOT USE other tie-downs in addition to or instead of the provided Breakaway Safety Clips.
- SECURE the Breakaway Safety Clips as directed.
- NEVER place a ladder or stand in front and at the level of the Front Bar of the Awning.

Failure to follow these instructions can present risk of **DEATH** or **SERIOUS INJURY** from being struck by an Awning suddenly opening while removing tie-downs.

Installation and First Use of Breakaway Safety Clips

- 1. Close the Oasis and unplug it from the electric outlet.
- 2. The Cover will be installed on top of the Oasis when the installation of the Safety Clip Tie-Downs is complete.
- 3. Remove the Protective Cover from its packaging. Orient the Cover on a clean work surface, so that the sewn hem is facing down.
- 4. Locate the Breakaway Safety Clips.
- 5. Form a loop in the Cord and pass it through a Grommet. See Figure 6. Pass the Cord with Safety Clip and Cord Lock through the loop (see Figure 7) and pull it snug. See Figure 8.
- 6. Repeat for each Breakaway Safety Clip on one side of Cover.
- 7. Lay the Cover across the top of the fully closed Oasis, sewn hem facing down.
- 8. Attach the Safety Clip to the other side of the Cover, along the hem by each Grommet location, passing it underneath the Oasis square bar. See Figure 9.
- 9. Cinch the Cord Lock to the desired snugness, then create a knot using the two cord ends so the knot is located approximately 1 inch from the Cord Lock. See Figure 10.
- 10. Trim the excess Cord close to the knot at each location. See Figure 10.
- 11. Call **800-670-7071** for Free replacement Cord Locks if necessary.

Detaching Breakaway Safety Clips

- 1. Verify Awning is closed and unplugged.
- 2. Position yourself under the Awning and detach each Safety Clip, one at a time.
- 3. DO NOT REMOVE the Cord Locks from the Cover.
- 4. Plug in the electrical cord to use the Awning.

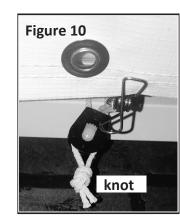




Figure 9

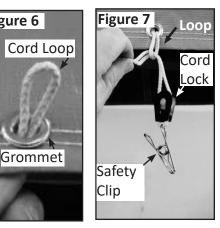


Figure 6

