



For Technical Support visit us at [ownerscorner.sunsetter.com](http://ownerscorner.sunsetter.com)  
or Call Toll Free 800-670-7071 • Fax 877-224-4944

## EasyShade Leading Bar Replacement Instructions

**Tools Needed:** Small amount of liquid soap.

For Motorized EasyShade only:  $\frac{5}{64}$ " Allen Wrench, Phillips screwdriver,  $\frac{7}{16}$ " Wrench.

**Parts Supplied:** Aluminum Leading Bar(s) and for Motorized EasyShades, two (2) Pre-Installed End Plugs.



**WARNING: FAILURE TO WEAR SAFETY GLASSES OR TO FOLLOW THE INSTRUCTIONS BELOW CAN RESULT IN PERSONAL INJURY!**

### Step 1.

**Manual Models:** Insert the Manual Crank Wand into the Crank Loop on the EasyShade. Unroll the EasyShade Panel to a comfortable working height. Remove the Crank Wand from the Crank Loop.

**Motorized Models:** Unroll the EasyShade Panel to a comfortable working height. Unplug the Power Cord from the outlet.

Remove the Cable Guide Stops from the bottom of the Vinyl Coated Cable on each side of the EasyShade using a  $\frac{5}{64}$ " Allen Wrench. Pull the Vinyl Coated Cable out of the Guide Holes in each end of the EasyShade Drop Down Panel. See Figures 1 and 2.

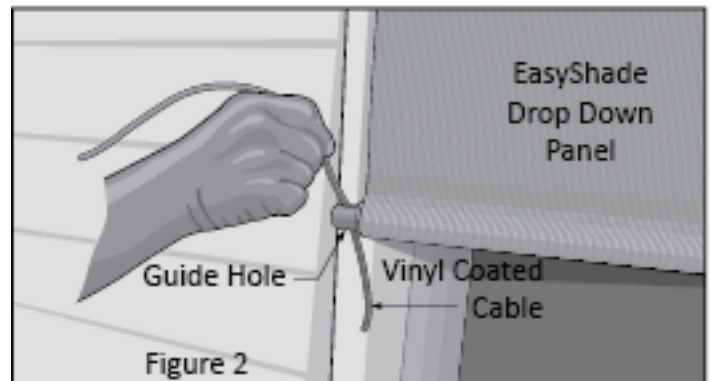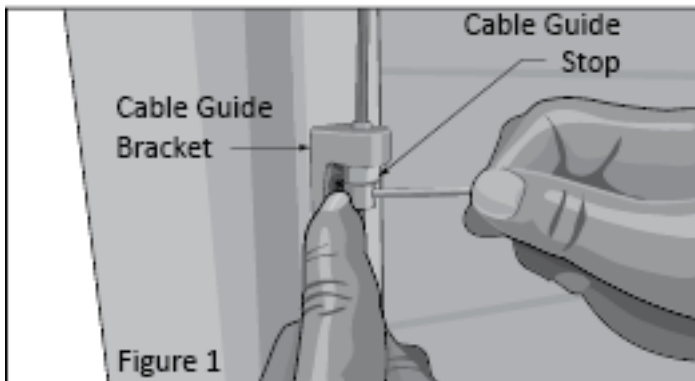


**Step 2.** Remove the old Leading Bar from the Bottom Sleeve of the EasyShade Panel.

**Manual Models:** Remove and save the End Caps from the Leading Bar removed from the Panel.

**Motorized Models:** New End Caps are provided with the replacement Leading Bar(s).

**NOTE:** Use a small amount of liquid soap to lubricate the Plastic Tube Connector (see Figure 3) to connect Aluminum Tube sections for 9 to 12 FT wide EasyShades.

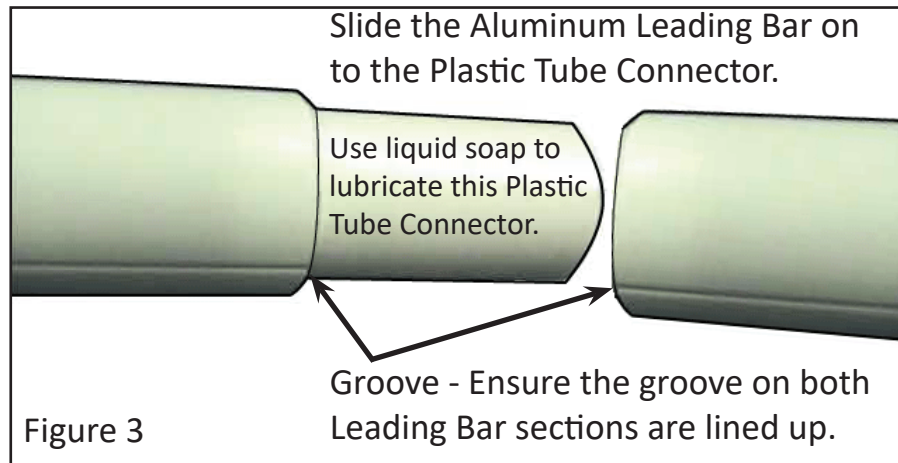

**Step 3.** The Aluminum Leading Bar for EasyShade models 9 to 12 FT long will require assembly of two sections of Leading Bars. **Note:** When connecting these two sections, ALIGN THE GROOVES in the Leading Bars. See Figure 3.

**Step 4. Manual Models ONLY:** Install the End Plugs from the original Leading Bar, that were removed from the EasyShade in Step 2.

**Step 5.** Insert the Aluminum Leading Bar into the Bottom Sleeve of the EasyShade Fabric Panel, where the original Leading Bar was removed.

**Manual Models:** Close the EasyShade and test for proper operation.

**Motorized Models:** Replace the Vinyl Coated Cable, through the Cable Guide Holes in the End Plugs. Attach the Cable Guide Stops and secure them in place with the  $\frac{5}{64}$ " Allen Wrench.

You should check to ensure that the Vinyl Coated Cables are tight, if they seem to be loose you can adjust the tension using a  $\frac{7}{16}$ " Wrench. On each of the Cable Guide Stops you will find a  $\frac{7}{16}$ " nut; by turning the nut Counter Clockwise you can tighten the Vinyl Coated Cable.

**NOTE: DO NOT OVER TIGHTEN THE CABLE.**

Test for proper operation.