



RETRACTABLE AWNINGS

For Technical Support visit us at www.sunsetter.com/ownerscorner
or Call Toll Free 800-670-7071 • Fax 877-224-4944

Valance and Fabric Adjustment Kit

Tools Needed: Phillips Screwdriver, Needle Nose Pliers, Scissors

Parts Supplied: Allen Wrench, Fabric Clamps (qty 2), Allen Set Screws (qty 2), Gray Cord (qty 1 ft)



Note: Left and Right references are as you face the house.

WARNING: Failure to follow these instructions can result in PERSONAL INJURY!! Please read these instructions in its entirety before attempting to complete this procedure.





Use these Fabric Clamps (see **Figure 1**) to secure the Valance from shifting position. Alternatively, this kit may be used for holding Awning Fabric in position.

1. Open the Awning to the fully extended position.
2. Unplug the Power Cord from the Wall Outlet.
3. Using a Phillips Screwdriver, remove the two End Plates from both sides of the Front Bar.
4. Beginning on the right side, pull the Valance out a few inches from the "Valance Slot."
5. If necessary, trim $\frac{1}{2}$ " off of the Gray Cord on the top of the Valance in order to insert the Fabric Clamp fully into the hemmed area. To accomplish this:
 - a. Hold the end of the Gray Cord with the Needle Nose Pliers with one hand. See **Figure 2**.
 - b. With the other hand, push the Fabric toward the center of the Front Bar to expose a $\frac{1}{2}$ " of the Gray Cord. See **Figure 2**.
 - c. Using the Scissors, trim the Gray Cord back, $\frac{1}{2}$ ". See **Figure 3**.
 - d. Pull the Fabric so the Gray Cord goes back into the Hemmed Area of the Valance.
6. If the Gray Cord in the hem does not fit end to end, then add additional Gray Cord as described in the following steps:
 - a. Measure the distance between the end of the Gray Cord and the end of the hem in the Valance. Subtract $\frac{1}{2}$ " from that measured length, to allow room to fit the bullet-shaped head of the Fabric Clamp into the hem.
 - b. Cut a piece of the supplied Gray Cord to that measured length.
 - c. Insert that new piece of Gray Cord into the hem.

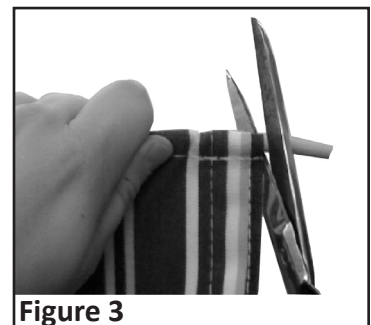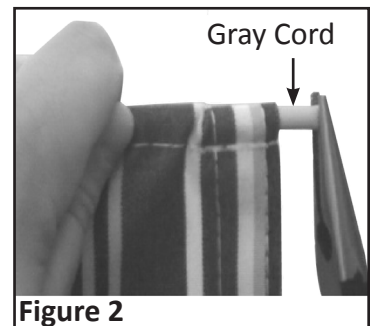

7. Insert the bullet-shaped End of the Fabric Clamp into the Hemmed Slot of the Valance. See **Figures 4 and 5**.
Note: Ensure that the Allen Screw is still exposed and Facing toward you.
8. Push the Valance back into the Fabric Slot on the Front Bar being careful that the Fabric Clamp does not fall out of the Valance.

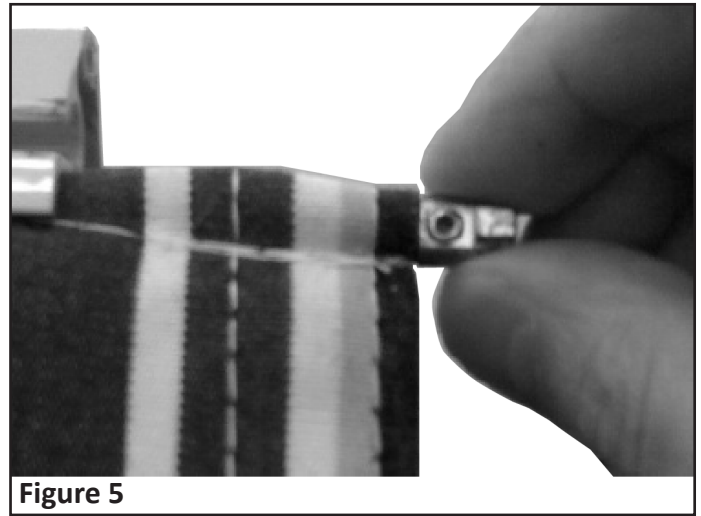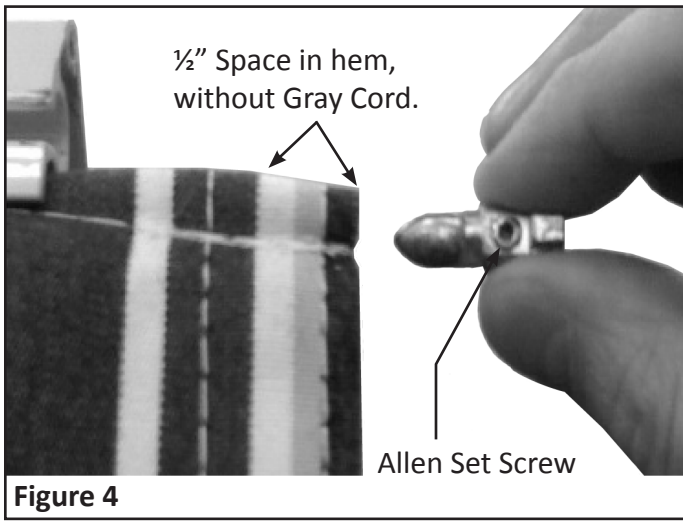

9. On the left side, pull the Valance out a few inches and repeat **steps 5 through 8**.
10. Line up the right side of the Valance with the right side of the Fabric and tighten the Allen Screw in the Fabric Clamp so the Valance will be held in place.
11. On the left side, if necessary, pull or stretch the Valance so that the edge lines up with the edge of the Fabric in the Front Bar.
12. Once the Valance is in the desired position, tighten the Allen Screw in the Fabric Clamp.
13. Re-install the End Plates onto the ends of the Front Bar.
14. Plug Power Cord into the Wall Outlet and test the Awning for proper operation.