



For Technical Support visit us at www.sunsetter.com/ownerscorner
or Call Toll Free 800-670-7071 • Fax 877-224-4944

Window Awning Front Bar Insert Replacement Instructions

*** Helper Needed ***


Tools Needed: 5mm Allen Wrench

Parts Supplied: Front Bar Insert(s)

WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN PERSONAL INJURY! PLEASE READ AND FOLLOW THESE INSTRUCTIONS IN THEIR ENTIRETY BEFORE ATTEMPTING TO COMPLETE THE PROCESS.

STEP 1. Open the awning, and allow the fabric to completely unroll.

STEP 2. On the Arm Assembly that you will be replacing the Front Bar Insert, remove the old Front Bar Insert and discard. Install the replacement Front Bar insert as shown in Figure 1.

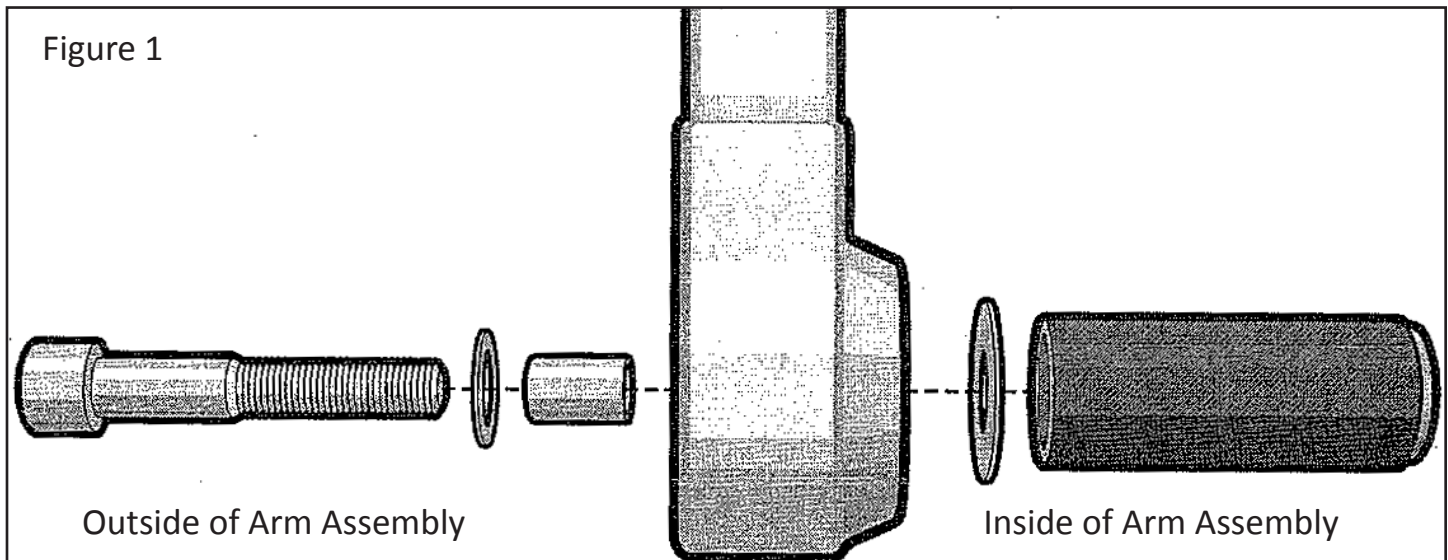

STEP 3. Slide the Rubber Front bar insert into the Front Bar. While holding the Front Bar, tighten the Insert using a 5mm Allen wrench. Repeat for the other side of Awning, if both Front Bar Inserts are being replaced.

STEP 4. Center the Fabric on the Front Bar, so that equal amounts of the Bar are exposed on either end.

STEP 5. Pull the Awning Cord so that the Fabric rolls up completely under the Hood Unit, test Awning for proper operation.