




TELESCOPING FLAGPOLES

For Technical Support visit us at [www.sunsetter.com/ownerscorner](http://www.sunsetter.com/ownerscorner)  
or Call Toll Free 800-670-7071 • Fax 877-224-4944

Vertical Deck/Dock Mount

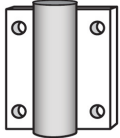

## Deck/Dock (Vertical) Installation Instructions

**Tools Needed:** Pen or pencil, Electric drill, Drill bits ( $\frac{1}{8}$ " ,  $\frac{3}{8}$ " ) two  $\frac{9}{16}$  Wrenches

**Parts Supplied:** Deck/Dock Mount, 4 bolts ( $\frac{3}{8}$ "x2  $\frac{3}{4}$ " ) zinc, 4 nuts ( $\frac{3}{8}$ "x16) zinc, 8 Flat washers ( $\frac{3}{8}$ " ) zinc, 2 Backing Plates

**WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN PERSONAL INJURY! PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE PERFORMING THIS PROCEDURE.**

1. Using the Deck/Dock mount as a template, mark the locations for the four bolt holes on a secure mounting surface (example 2" x 10" board).
2. Using the  $\frac{1}{8}$ " bit, drill four pilot holes thru the mounting surface where you made the 4 marks.
3. Using the  $\frac{3}{8}$ " bit, enlarge the pilot holes thru the mounting surface.
4. Place a washer on one of the bolts and put the bolt through the mount and the corresponding hole in your mounting surface.
5. Place the backing plate, another washer and nut on the threaded end of the bolt on the other side of the mounting surface.
6. Repeat steps 4 and 5 for the remaining 3 holes.
7. Using your  $\frac{9}{16}$ " wrenches, tighten all of the nuts..