



RETRACTABLE AWNINGS

For Technical Support visit us at www.sunsetter.com/ownerscorner or Call Toll Free 800-670-7071 • Fax 877-224-4944

Fabric Repair kit
-Application Instructions-

Items Supplied: (2) 3" x 6" clear patches (Type A for Acrylic or Type B for Vinyl), (1) Alcohol Prep pad.

TEAR-AID™ Patch

CANVAS, NYLON, RUBBER and PLASTIC products that this patch can repair are listed in the application guide. "USER MUST STRICTLY" follow the application instructions and product repair list carefully to obtain proper bond.

TYPE A


Kit-1 8032 includes Type A for Woven Acrylic

PATCH TYPE B

VINYL and VINYL COATED products that this patch can repair are listed in the application guide. "USER MUST STRICTLY" follow the application instructions and product repair list carefully to obtain proper bond.

TEAR-AID™ Patch

Kit 7004-1 includes Type B for Laminated Vinyl

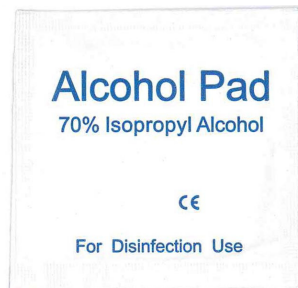

Note: Best results will be achieved when the clear patch is applied to a clean, dry surface. The surface temperature of the fabric to be repaired should be 50 degrees Fahrenheit or greater.

Step 1. Clean the area of the fabric to be repaired with the supplied alcohol prep pad.

Before proceeding make sure the surface is dry.

Step 2. The clear patch may be cut to size with scissors. If you must cut a smaller size patch, trim all corners round before removing the liner from the clear patch. When determining the size of the patch, ensure that it overlaps the hole or tear by approximately one inch on all sides.

Step 3. On one side of the patch, carefully peel back 1/2" of the protective liner to expose the adhesive side.

Step 4. Position and apply the 1/2" exposed edge of the patch. Slowly remove the liner from the patch taking care to remove air pockets and seal the edges as the patch is applied. Rub the entire patch aggressively to ensure a proper seal.