



For Technical support visit us at [www.sunsetter.com/ownerscorner](http://www.sunsetter.com/ownerscorner)  
or call Toll Free 800-670-7071 • Fax 877-224-4944

## The SunSetter Mat

**Tools Needed:** Phillips Screwdriver, hammer, 1/8" drill bit, Electric drill, 1/4" masonry drill bit.

**Parts Supplied:** SunSetter Mat, (8) Phillips attachment screws, (8) finishing washers, (8) plastic anchors.

The SunSetter Mat is designed to fit an area of your deck or patio. You may choose to secure the mat to your deck or patio using the supplied attachment screws and washers. Simply follow the directions listed below.

1. Position the mat at the desired location on your deck or patio. Beginning at one corner, make a mark on the mat and deck/patio- see figure 1.

2. **For Wood Decks:** Using the 1/8" bit, drill a hole into the wooden deck approximately 1" deep.

**For Concrete Patios:** Using the 1/4" masonry bit, drill a hole into the concrete patio approximately 1" deep. Insert a plastic anchor into the hole that you just drilled. Using a hammer, tap it flush with the surface of the concrete.

3. Secure the mat to the deck or patio using an attachment Phillips screw and finishing washer as shown in Figure 1. Make sure that the head of the screw is not protruding above the top edge of the finishing washer.

4. Move to the next corner of the mat and make sure that the mat has no wrinkles. Repeat steps 1 thru 3 for the remaining 3 corners and any sides that you may wish to secure.

### Care and Maintenance

The SunSetter mat can be easily cleaned by simply rinsing with water. For more thorough seasonal cleanings you can clean the mat with a mild detergent or you can call 1-800-876-2340 to order a SunSetter Cleaning and Maintenance Kit.

**Caution:** After it gets wet, the surface of the mat may be slippery while the water drains through the fabric.

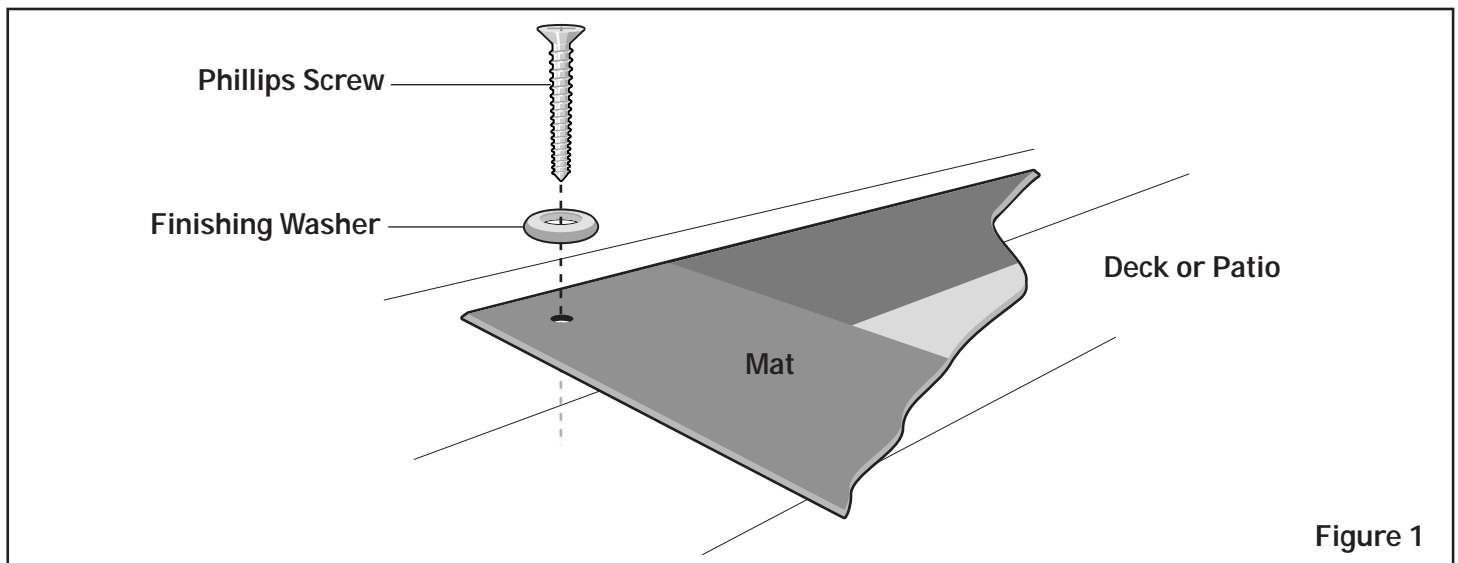


Figure 1