



For Technical Support visit us at www.sunsetter.com/ownerscorner
or Call Toll Free 800-670-7071 • Fax 877-224-4944


Adjusting the Front Bar Connectors

Helper Needed

WARNING: FAILURE TO FOLLOW THE INSTRUCTIONS BELOW COULD RESULT IN PERSONAL INJURY!!
PLEASE READ THESE INSTRUCTIONS IN ITS ENTIRETY BEFORE ATTEMPTING TO COMPLETE THIS PROCESS.
FAILURE TO DO SO COULD RESULT IN PERSONAL INJURY.

Tools Needed: 5mm Allen wrench, 2 ladders.


1. Close the Awning.
2. For Motorized models, unplug the power cord from the wall outlet.
3. Position a ladder and helper, centered beneath the Awning, under the two Elbows of the closed Lateral Arms. See **Figure 1**.

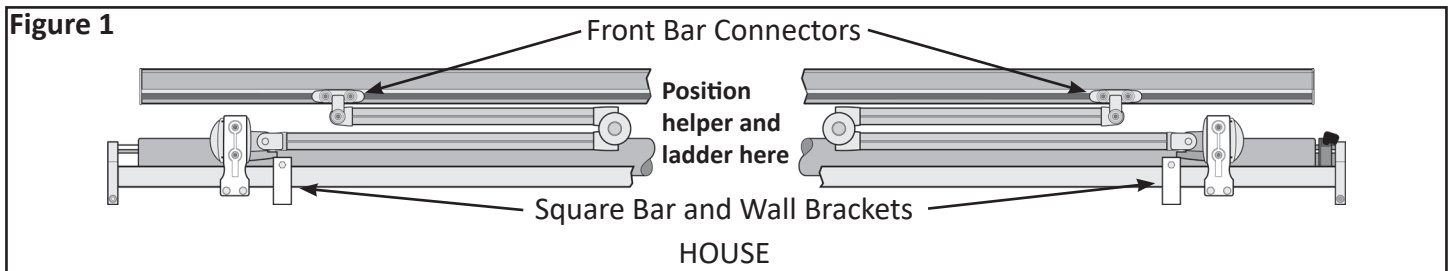

4. Position yourself and the second ladder under one of the Front Bar Connectors.

WARNING: BEFORE PERFORMING THE NEXT STEPS, MAKE SURE NO LADDER, PERSON OR OBJECT IS IN FRONT OF THE AWNING. FAILURE TO DO SO COULD RESULT IN PERSONAL INJURY.

5. Using the 5mm Allen wrench, loosen the two 5mm Allen bolts (**WARNING: NO MORE THAN ONE HALF TURN**) that attach the Front Bar Connector to the Front Bar. See **Figure 2**.
6. Move the second ladder under the other Front Bar Connector and loosen the two Allen bolts (**WARNING: NO MORE THAN ONE HALF TURN**) where the Front Bar Connector attaches to the Front Bar. See **Figure 2**.
7. Have your helper move and **HOLD** both Lateral Arms (**AT THE ELBOWS**) to the desired location (**SHOULD BE APPROXIMATELY 2 INCHES FROM THE SQUARE BAR**). The loosened Front Bar Connectors will realign themselves during this process.

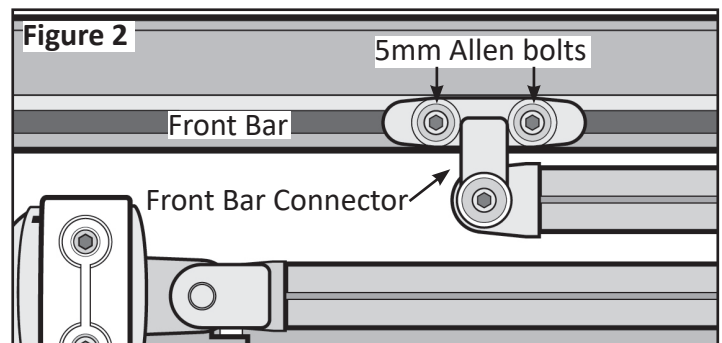

8. While your helper is holding the Lateral Arms in position, tighten the two 5mm Allen bolts on each Front Bar Connector.
9. The helper can let go of the Lateral Arms and step down from the ladder.
10. For Motorized models, plug the power cord into the wall outlet.
11. Check your Awning for proper operation. The Awning should open all the way and close all the way, resulting in both Lateral Arms folding closed, under the closed Awning.